

CIRCUIT BREAKER IDENTIFICATION

	TYPE B MANUAL RESET-FUSES WHEN EXTERNAL SWITCH IS PLACED.
	TYPE H- RESETS WHEN OVERCURRENT IS CORRECTED OR REMOVED.

BATTERY FUSE NOTE:
 FUSE (100 AMP) MUST BE MOUNTED WITHIN 12" OF THE SOURCE. FUSE MCC PART NO. 22-02336-31 AND HOLDER 22-01800-00 SHOULD BE HOOKED UP WITH RED 4 GAUGE SGX WIRE MCC P/N 22-62241.

