



FUSE	FUNCTION	SIZE
F1	CONDENSER FAN 1	30A
F2	CONDENSER FAN 2	30A
F3	EVAPORATOR 5	30A
F4	EVAPORATOR 3	30A
F5	EVAPORATOR 1	30A
F7	CLUTCH	15A
F8	CONDENSER FAN 3	30A
F9	SOLENOID VALVES	10A
F10	EVAPORATOR 6	30A
F11	EVAPORATOR 4	30A
F12	EVAPORATOR 2	30A

RELAY	FUNCTION	SIZE
RL1	EVAP. BLOWERS LO RELAYS	40A
RL2	EVAP. BLOWERS HI RELAYS	40A
RL3	CONDENSER FAN 1	40A
RL4	CONDENSER FAN 2	40A
RL5	EVAPORATOR BLOWER 5 HI	40A
RL6	EVAPORATOR BLOWER 5 LO	40A
RL7	EVAPORATOR 3 HI	40A
RL8	EVAPORATOR 3 LO	40A
RL9	EVAPORATOR 1 HI	40A
RL10	EVAPORATOR 1 LO	40A

RELAY	FUNCTION	SIZE
RL12	CONDENSER FANS & SOLENOID RELAYS	40A
RL13	CONDENSER FAN 3	40A
RL14	SOLENOID VALVES	40A
RL15	EVAPORATOR BLOWER 6 LO	40A
RL16	EVAPORATOR BLOWER 6 HI	40A
RL17	EVAPORATOR BLOWER 5 LO	40A
RL18	EVAPORATOR BLOWER 5 HI	40A
RL19	EVAPORATOR BLOWER 2 LO	40A
RL20	EVAPORATOR BLOWER 2 HI	40A

PART NAME									
<b>RELAY CONTROL 007-00019-001 RELAY AND FUSE LOCATION</b>									
DATE	2/19/13			SCALE	DOC. NO.	PART NO			
NAME	Jim W			FREE					
	DRAW	CHECK	APP	VOLTAGE		<b>2000008A</b>			
				12V					
REPLACED BY PART NO.				REPLACEMENT FOR PART NO.				PAGE	1 / 1